

Rhetorex Voice Board Jumper Settings

There are 2 types of 4-line boards: The "Quartet" does not have jumpers and must be used for the first 4 telephone lines. The "432" has 10 jumpers (numbered 0-9), at the bottom of the board. These boards may be used for any of the telephone lines, but the jumpers must be set as follows:

Voice Board

Jumper Addresses:

0 1 2 3 4 5 6 7 8 9

.	.	.	.	.	.	.	.	.	.
.	.	.	.	.	.	.	.	.	.

. = jumper pins



= jumper

0 1 2 3 4 5 6 7 8 9

.	.	.	.	.	.	.	.	.	.
.	.	.	.	.	.	.	.	.	.

Jumper settings for lines 1-4
(if using board with jumpers)
(Hex address 300)

0 1 2 3 4 5 6 7 8 9

.	.	.	.	.	.	.	.	.	.
.	.	.	.	.	.	.	.	.	.

Jumper settings for lines 5-8
(Hex address 301)

0 1 2 3 4 5 6 7 8 9

.	.	.	.	.	.	.	.	.	.
.	.	.	.	.	.	.	.	.	.

Jumper settings for lines 9-12
(Hex address 302)

Rhetorex Voice Board Jumper Settings

0	1	2	3	4	5	6	7	8	9
.	.	.	.	.	.	.	.	.	.
.	.	.	.	.	.	.	.	.	.

Jumper settings for lines 17–20
(Hex address 304)

0	1	2	3	4	5	6	7	8	9
.	.	.	.	.	.	.	.	.	.
.	.	.	.	.	.	.	.	.	.

Jumper settings for lines 21–24
(Hex address 305)

0	1	2	3	4	5	6	7	8	9
.	.	.	.	.	.	.	.	.	.
.	.	.	.	.	.	.	.	.	.

Jumper settings for lines 25–28
(Hex address 306)

0	1	2	3	4	5	6	7	8	9
.	.	.	.	.	.	.	.	.	.
.	.	.	.	.	.	.	.	.	.

Jumper settings for lines 29–32
(Hex address 307)