



Intel® Dialogic® D/160SC-LS


Quick Install Card

Part Number 05-2053-001
Copyright © 2003 Intel Corporation

1. Protect the Boards from Damage

CAUTION! Computer boards are static-sensitive and can be damaged by touching or handling. To prevent damage from static electricity, do the following:

- Wear a grounded, static-dissipative wrist strap for the entire hardware installation.
- Work at a static-safeguarded work station (see below).

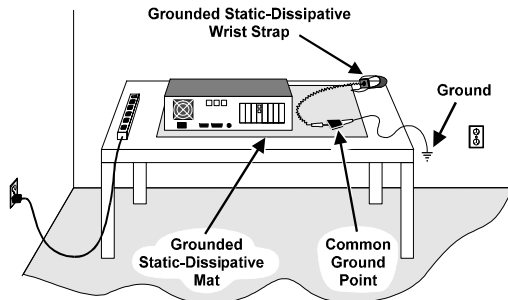

The work surface drains electrical charges from conductive materials when the materials are placed on the surface. The grounded, static-dissipative wrist strap drains static charge from the person wearing the strap. Both components ensure that static charges are drained at a rate and current level that are safe. Both must be used any time a person is handling a board or component.

2. Installation Order

Intel recommends that you install Intel® Dialogic® hardware before software. However, if you are adding hardware to an existing system, you do not need to uninstall existing Intel® Dialogic® software.

3. Set the Hardware Switches

Setting the Board Identification Number (SW100)

Each D/160SC-LS board in your system must have a unique identification number. Intel® Dialogic® drivers use the board ID setting to communicate with the board.

Turn the rotary switch (SW100) to select one of 16 board ID settings: 0-9, A-F.

NOTE: More than one board with the same board ID setting will not be found by the driver software.

Attaching the PEB Terminator (XTERM) (PEB Mode Only)

When running in PEB mode, attach the PEB terminator to the XTERM socket as shown. Terminated voice resource boards use the Resource Module position. Terminated network interface or network/resource combination boards use the Network Module position.

NOTE: When running in SCbus mode, do not insert the terminator.

Straight PEB cable configuration rules

One end of the PEB cable must be connected to a Network Module and the other end of the cable must be connected to a Resource Module. Both of these modules must have bus termination resistors installed in the XTERM socket.

Additional Network Extension Modules and/or additional Resource Modules can populate the PEB cable anywhere except for an end position. These modules must not have bus termination resistors installed in the XTERM socket.

Drop-and-insert Configuration rules


Both ends of the PEB drop-and-insert (crossover) cable must be connected to Network Modules. Both of these Network Modules must have bus termination resistors installed.

Any number of Network Extension Modules and/or Resource Modules can populate the PEB crossover cable anywhere except at an end position. These modules must not have bus termination resistors installed.

Stand-alone Configuration rules


All boards in stand-alone configurations (no PEB cable) must use the Resource Module position.

Physical Description

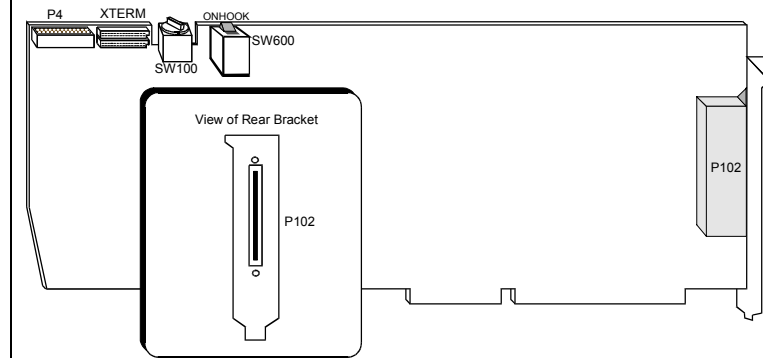

Note: This description refers to the D/160SC-LS single board product

Part	Function
P4	Connector for SCbus cable
XTERM	Terminator socket for PEB
SW100	Switch to set the board ID number
SW600	Switch to set the initial hookswitch state (Default = onhook)
P102	Connector to station adapter (DB37)

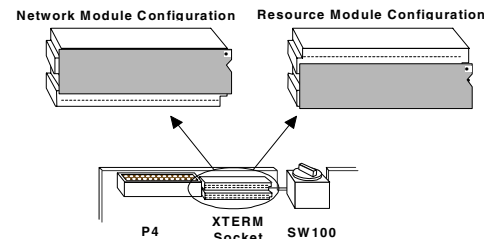


Set the Hook-Switch State for Start-Up (Optional)

Set the SW600 switch as follows to select how the board responds to an incoming call when the computer power is on but the board is not initialized.



SW600 = On: (default): Callers hear ringing (on-hook).




SW600 = Off: Callers hear a busy signal (off-hook).

The board acts upon the switch setting only at power-up time.


NOTE: If the computer power is off, callers hear ringing (on-hook) regardless of the setting of the SW600 switch.

Install each board in the PC chassis using adjacent ISA slots according to the following instructions.

1. Turn off all power to the system, and disconnect the system's power cords from electrical outlets.
2. Remove the PC cover.
3. Select an empty ISA expansion bus slot, and remove the slot's retaining screw and access coverplate.

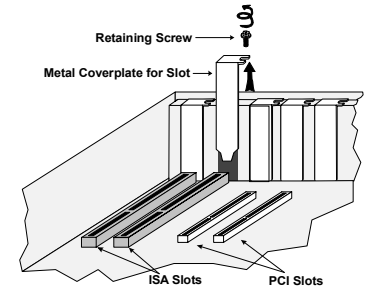

4. Insert the board's edge connector into the bus slot. Apply pressure only to the top edge of the board, and gently rock the board forward and backward to seat the edge connector into the slot.

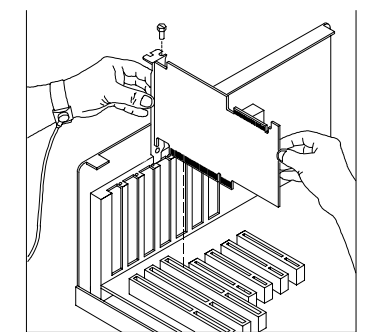

5. Install the retaining screw.
6. Select a new slot and repeat steps 3 through 5 for each board you are installing. Replace the PC cover when finished.


4. Install the Boards in the PC

WARNING! To reduce the risk of electric shock:

- Switch off the power and remove power cords before opening the computer case.
- Do not re-attach power cords or switch on power to the computer while the computer case is removed.
- Refer to the Regulatory Notices for important installation information.


5. Connect External Cables

Use the SCbus/PEB cable to connect the D/160SC-LS board to other SCbus/PEB boards in the system.

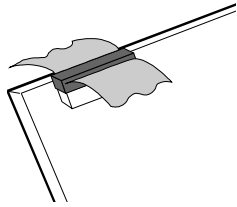

Connecting the Hardware to the Station Adapter

1. Open the back of the station adapter and remove the adhesive pads from the housing.
2. Use one of the following two procedures to mount the back of the station adapter to the desired location.
Apply double-sided tape to the side of the rear panel that touches the mounting surface and press the tape against the mounting surface.
Hold the rear panel against the mounting surface. Insert screws through the screw holes and fasten the panel to the surface.
3. Reassemble the station adapter housing.
4. Connect the station adapter to the D/160SC-LS board with the cable packaged with the station adapter. Insert the 37-pin cable end into the P102 connector on the board bracket. Insert the 50-pin cable end into the connector on the station adapter.

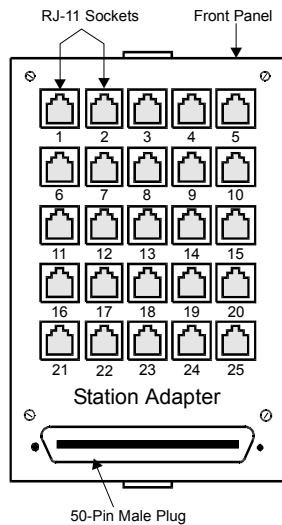


RJ-11 Socket #25 is not available for use.

NOTE: The LSI 1459 adapter is required as a condition of UL recognition. US and Canadian installations requiring this

certification should follow the steps in “Adding UL 1459 Adapter Support” instead of step 4.

Adding UL 1459 Adapter Support

1. Connect the LSI 1459 adapter to the station adapter with the cable packaged with the LSI 1459 adapter.

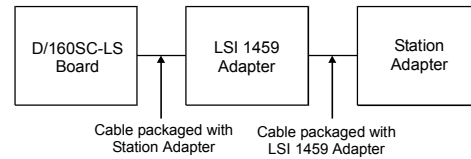

2. Connect the D/160SC-LS board to the LSI 1459 adapter with the cable packaged with the station adapter.

Important: You must purchase the LSI 1459 adapter as a condition of UL recognition. The Intel part numbers are as follows:

- LSI 1459 Adapter - 95-0002-001
- Station Adapter - 95-0003-001 (includes cable and mini patch panel)

SIGNAL	PIN #	SIGNAL
Ring 3	20	1 Tip 1
Ring 4	21	2 Tip 2
Ring 5	22	3 Tip 3
Ring 6	23	4 Tip 4
Ring 7	24	5 Tip 5
Ring 8	25	6 Tip 6
Ring 9	26	7 Tip 7
Ring 10	27	8 Tip 8
Ring 11	28	9 Tip 9
Ring 12	29	10 Tip 10
Ring 13	30	11 Tip 11
Ring 14	31	12 Tip 12
Ring 15	32	13 Tip 13
Ring 16	33	14 Tip 14
Unused	34	15 Tip 15
Unused	35	16 Tip 16
Unused	36	17 Unused
Unused	37	18 Ring 1
		19 Ring 2

Pinout for the DB-37-Pin Male Connector on the Bracket

6. Install Software, Configure and Test

Install the Intel® Dialogic® software release and configure the boards as described in the software installation documentation.

Your application software or Intel® Dialogic® software release may have special installation or configuration instructions or requirements. Be sure to read this information before you install the software.

Direct Return Authorization (DRA) Process

To return a board for repair or credit in the American geographies, use the online form at <http://www.intel.com/support/motherboards/draform.htm>

To return a board for repair or credit in all other geographies, please contact your distributor.